
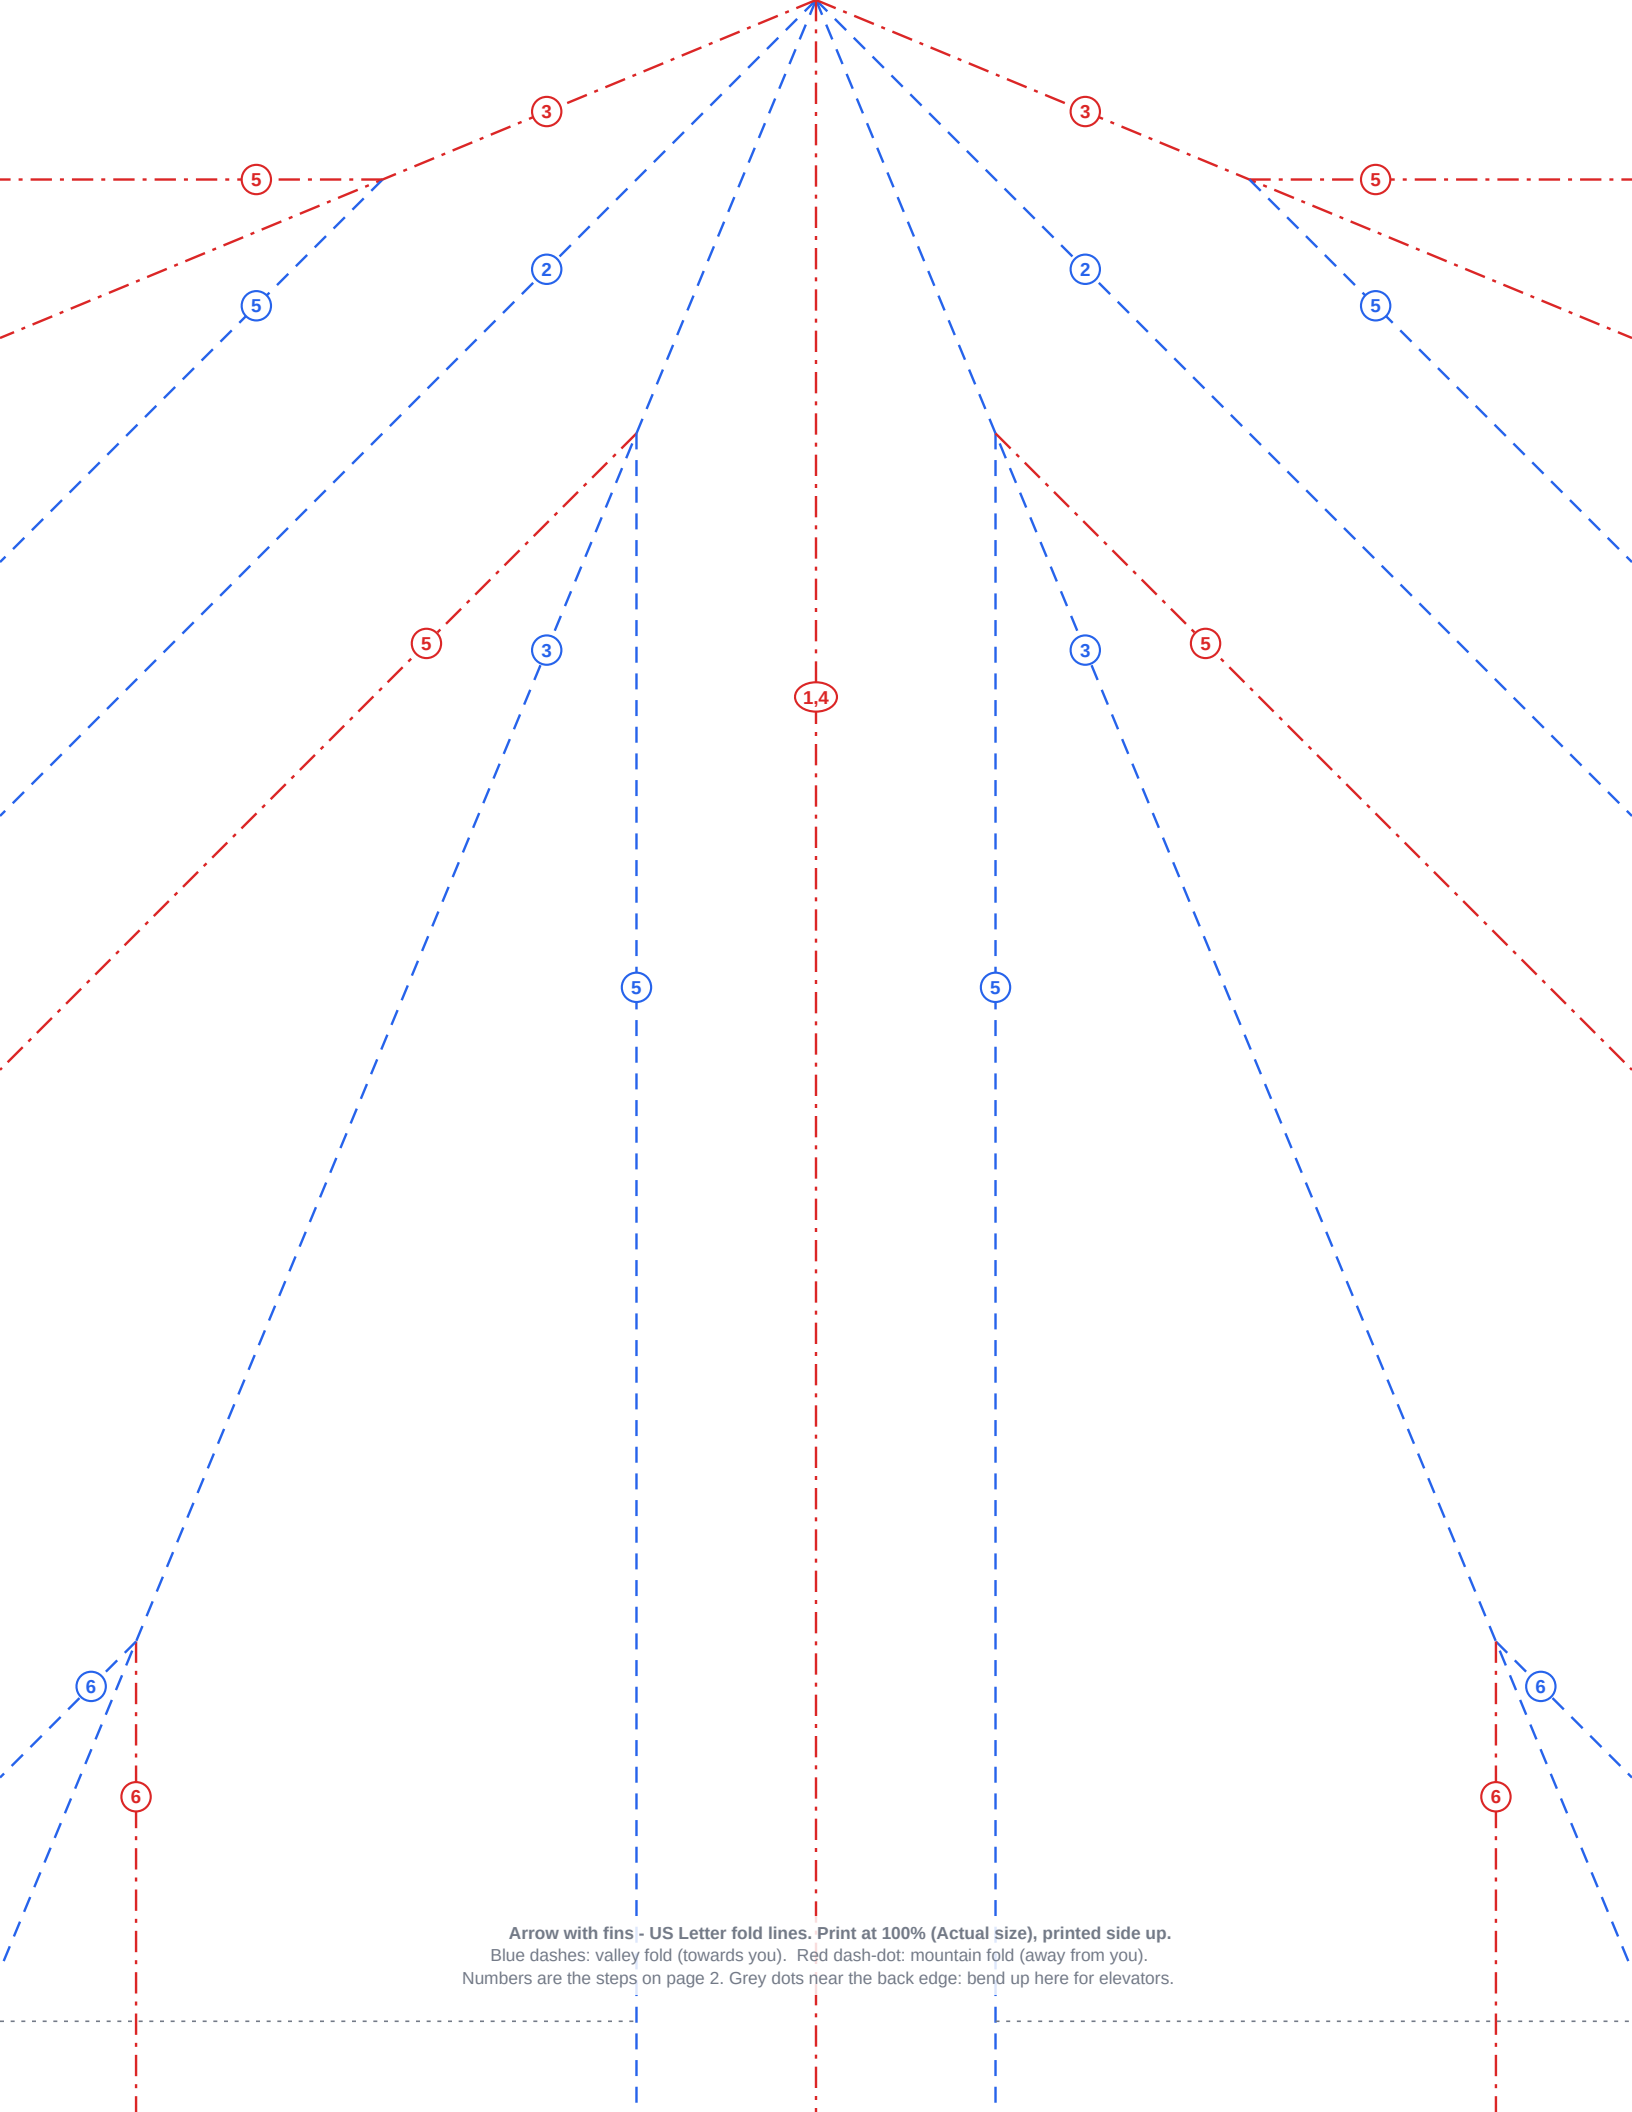



Arrow with fins - US Letter fold lines. Print at 100% (Actual size), printed side up.
Blue dashes: valley fold (towards you). Red dash-dot: mountain fold (away from you).
Numbers are the steps on page 2. Grey dots near the back edge: bend up here for elevators.

How to fold the Arrow with fins


Difficulty: medium - best for: Distance. Start with page 1 printed side up.

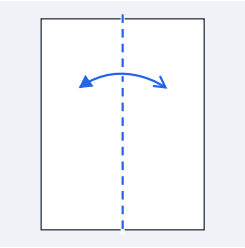


1 Lay the sheet portrait, printed side up. Fold it in half lengthwise, crease firmly and unfold again. The centre crease is your guide for every fold that follows.

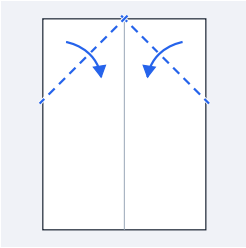


2 Fold both top corners in to the centre crease.

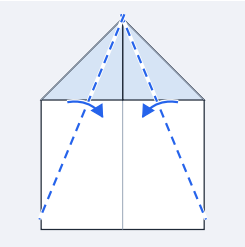


3 Fold the slanted edges in to the centre crease again, making a long point.

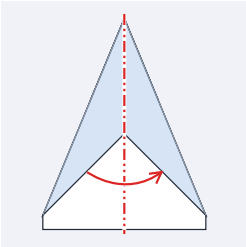


4 Turn the plane over and fold it in half along the centre crease, so the folded flaps end up on the outside. Turn it so the nose points left.

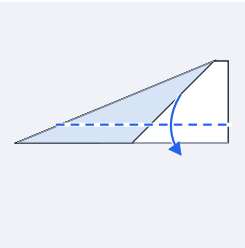

5 Fold the top wing down along a line parallel to the bottom edge, about 2.4 cm (7/8 in) above it. Turn over and fold the other wing to match.

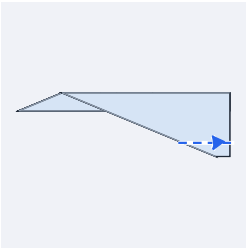

6 Fold the outer 1.8 cm (3/4 in) of each wing back up to make the fins.

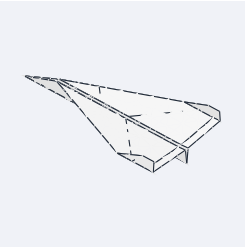

7 Open the wings until they are level and stand the fins straight up.

Throwing and trimming

- Throw firmly and level. The fins keep it pointing into the airflow, so it tracks straight.
- Launch it slightly upward outdoors for the longest flights.
- Keep both fins upright and equal; a fin that leans makes it turn.
- Dives: bend the back edges of the wings (between body and fins) up slightly.