
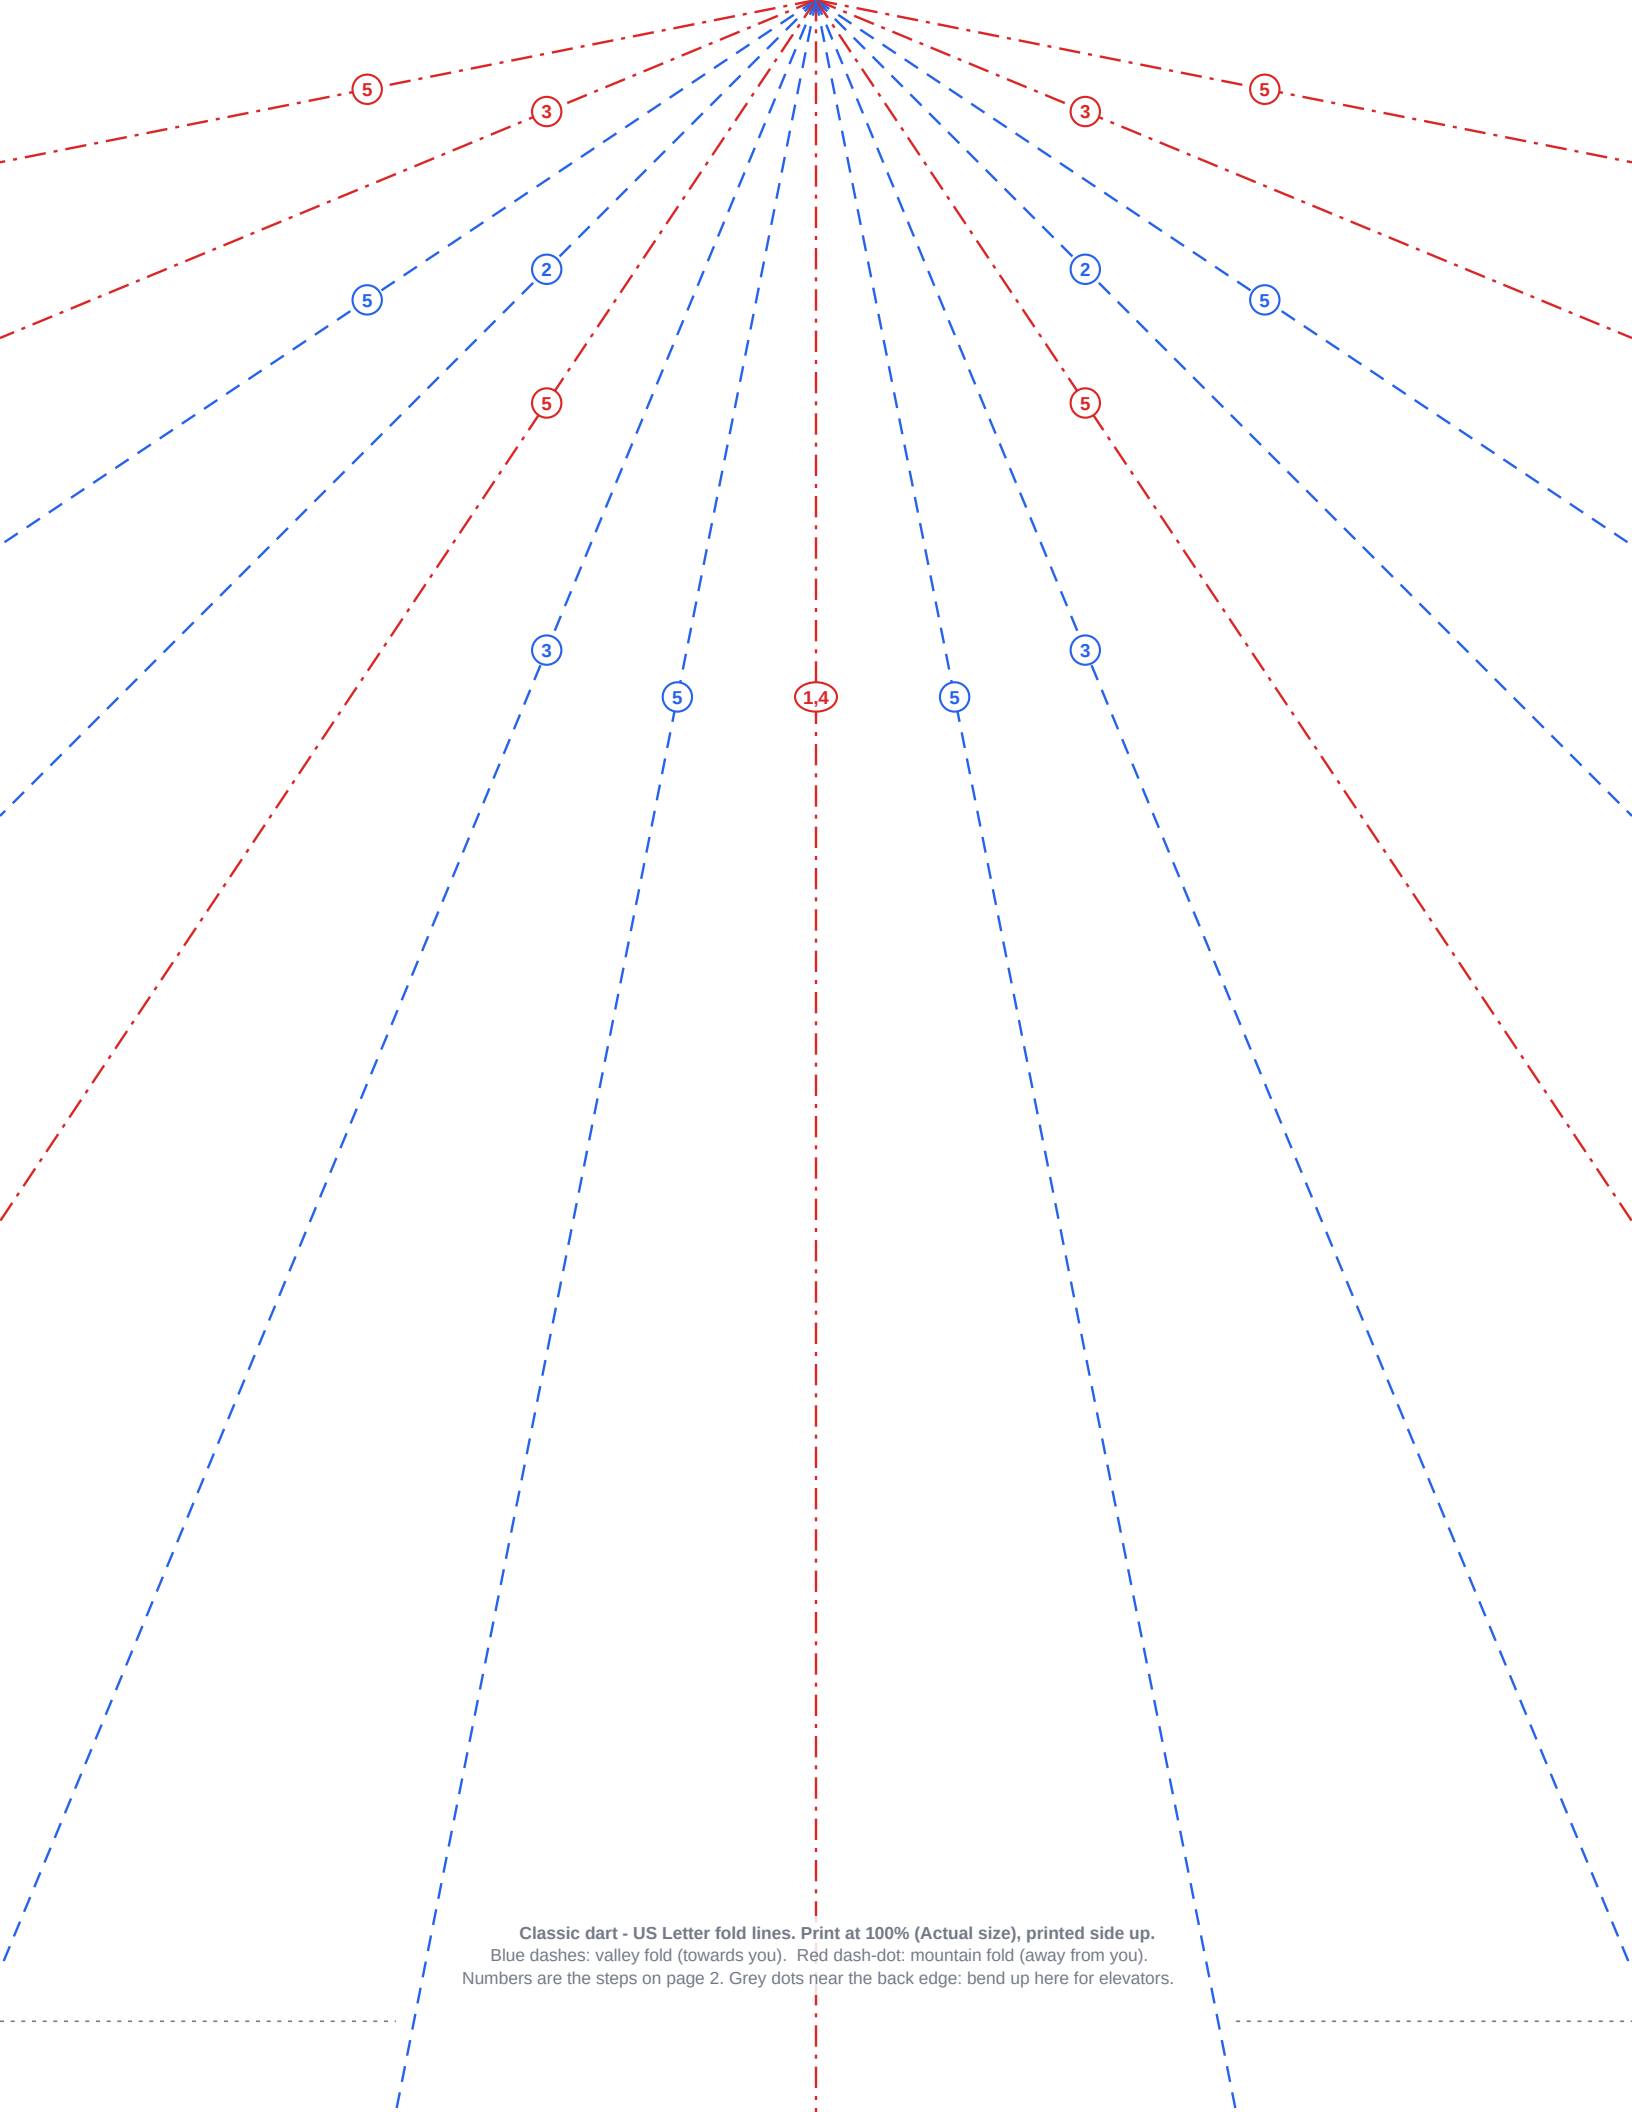



Classic dart - US Letter fold lines. Print at 100% (Actual size), printed side up.
Blue dashes: valley fold (towards you). Red dash-dot: mountain fold (away from you).
Numbers are the steps on page 2. Grey dots near the back edge: bend up here for elevators.

How to fold the Classic dart


Difficulty: easy - best for: Distance, First flights. Start with page 1 printed side up.

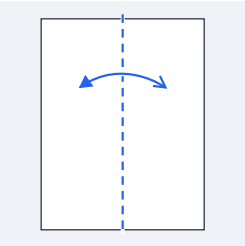


1 Lay the sheet portrait, printed side up. Fold it in half lengthwise, crease firmly and unfold again. The centre crease is your guide for every fold that follows.

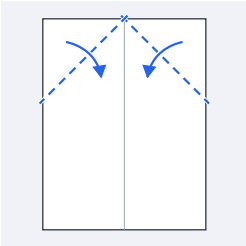


2 Fold the two top corners in so their top edges lie exactly along the centre crease, making a pointed roof shape.

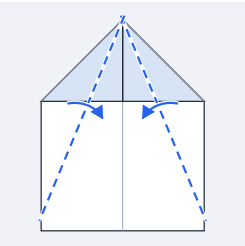


3 Fold the new slanted edges in to the centre crease again, one side at a time. The nose becomes a long, narrow point.

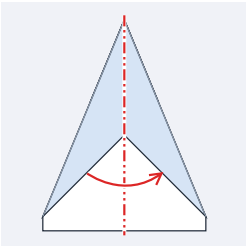

4 Turn the plane over and fold it in half along the centre crease, so the folded flaps end up on the outside. Turn it so the nose points left.

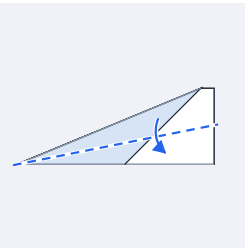

5 Fold the top wing down so its top edge lies along the bottom edge (the keel). Turn over and do the same with the other wing. At the tail the body is about 5.6 cm (2 1/4 in) deep.

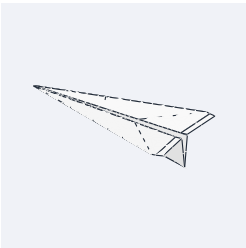

6 Open the wings so they are flat and level, with a slight upward V seen from the front.

Throwing and trimming

- Hold the body just behind the balance point, between thumb and first finger.
- Throw firmly and straight ahead, level or a few degrees nose-up. Darts need speed to fly; a soft throw makes them dive.
- If it dives straight into the floor, bend the back edges of both wings up a little (1–2 mm of upward bend over the last centimetre).
- If it climbs, slows and drops (stalls), flatten that bend again.
- If it turns, check that both wings are the same shape and level; a small up-bend on one side makes it turn toward that side.