
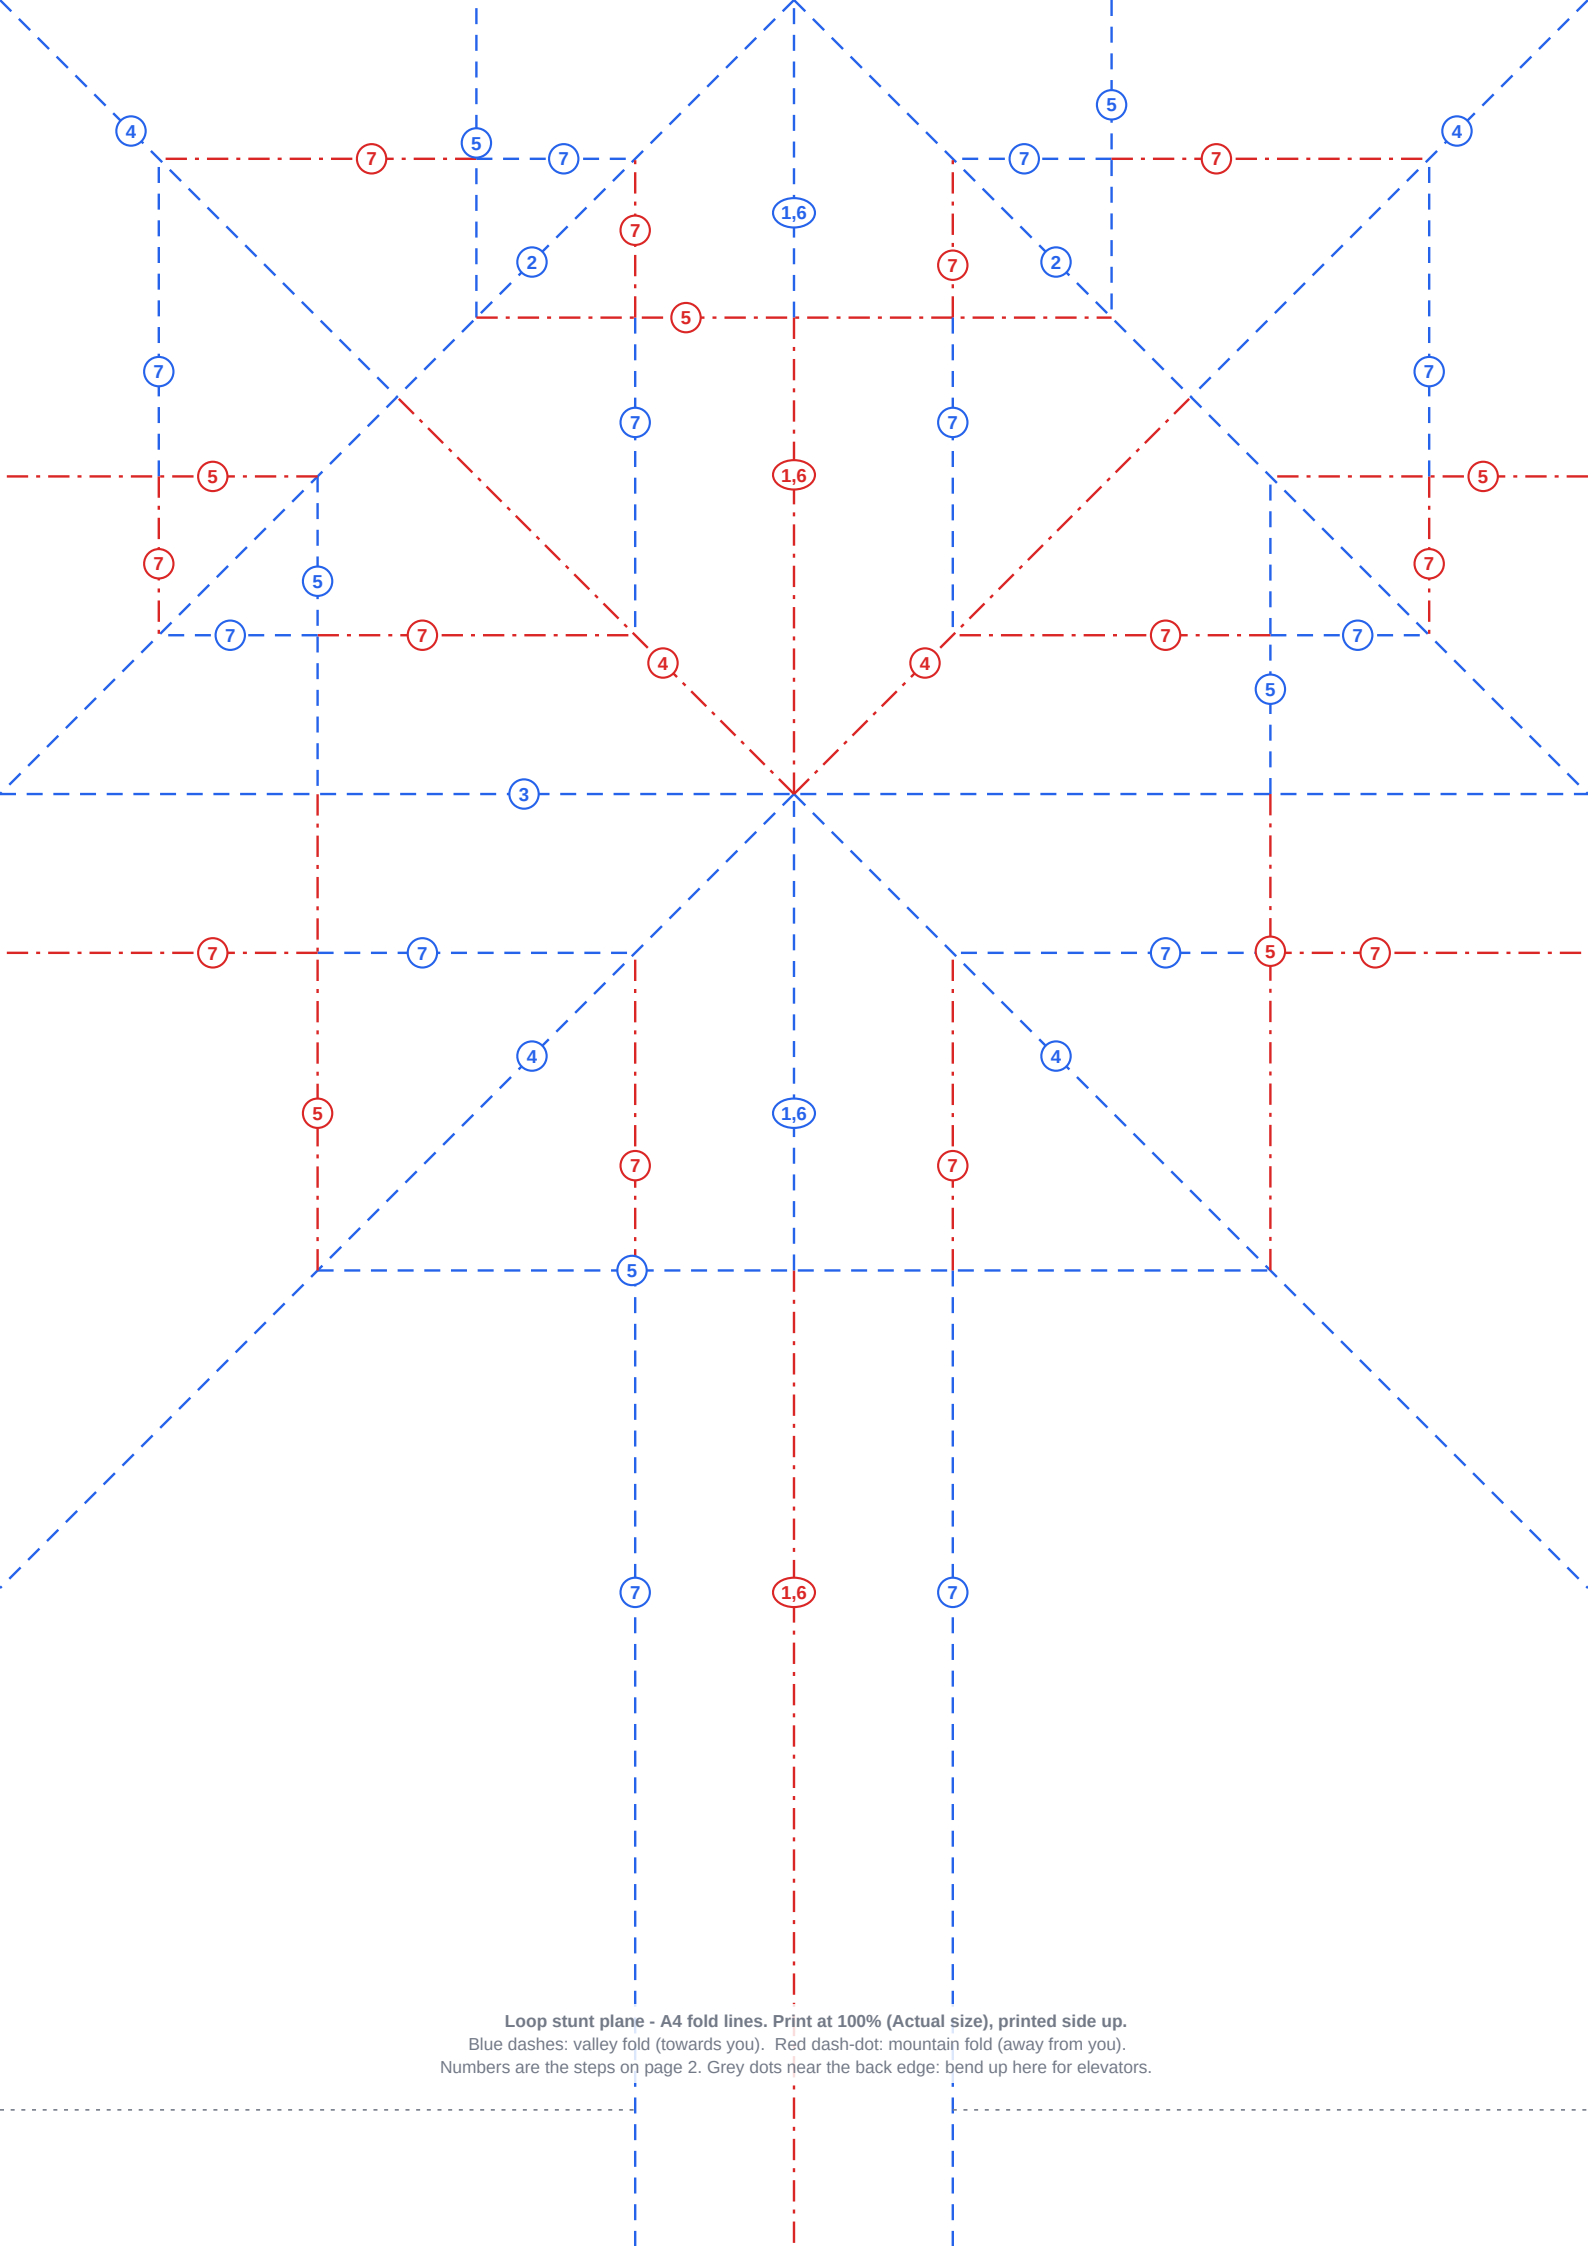



Loop stunt plane - A4 fold lines. Print at 100% (Actual size), printed side up.
Blue dashes: valley fold (towards you). Red dash-dot: mountain fold (away from you).
Numbers are the steps on page 2. Grey dots near the back edge: bend up here for elevators.

How to fold the Loop stunt plane


Difficulty: easy - best for: Loops & tricks. Start with page 1 printed side up.

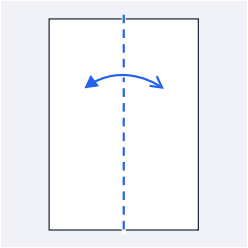


1 Lay the sheet portrait, printed side up. Fold it in half lengthwise, crease firmly and unfold again. The centre crease is your guide for every fold that follows.

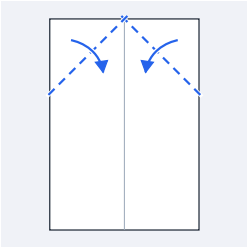


2 Fold both top corners in to the centre crease.

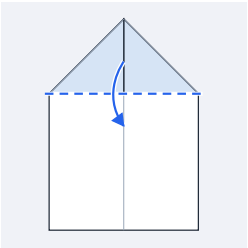


3 Fold the whole pointed top down along the line where the flaps end, so the top edge is straight.

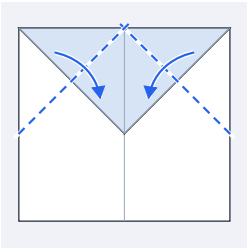


4 Fold the two new top corners in to the centre crease.

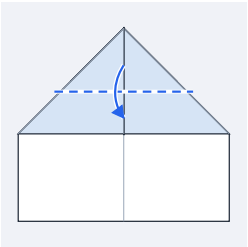


5 Fold the pointed nose down along the line where the new flaps end, through all layers. The nose is now blunt and heavy.

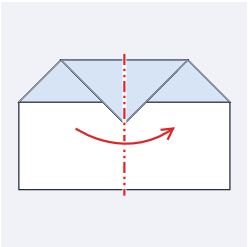

6 Turn the plane over and fold it in half along the centre crease, so the folded flaps end up on the outside. Turn it so the nose points left.

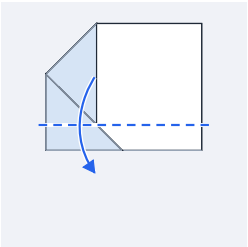

7 Fold the top wing down along a line parallel to the bottom edge, about 2.1 cm (7/8 in) above it. Turn over and fold the other wing to match.

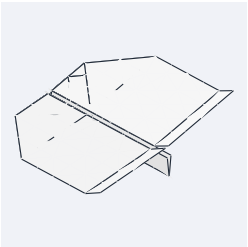

8 Open the wings level, then bend the back 1.8 cm (3/4 in) of each wing sharply up to make elevators.

Throwing and trimming

- For a loop, throw hard and fairly steeply upward. The bent-up elevators pitch the nose up until it goes over the top.
- A soft level throw makes it climb, slow down and flutter to the floor instead.
- Loops too small or stalls: bend the elevators down a little.
- Will not loop: bend the elevators up more, and throw harder.
- Bend one elevator up and the other down to make it roll.